

EXTERIOR TRIM AND ORNAMENTATION

ROCKER PANEL MOULDING [GZ16504.2]

REMOVAL AND INSTALLATION					
76.11.56	ROCKER PANEL - RENEW	LWB	0.70	USED WITHINS	<input type="checkbox"/>
76.11.56	ROCKER PANEL - RENEW	SWB	0.60	USED WITHINS	<input type="checkbox"/>

REMOVAL

CAUTION:

Protect the surrounding paintwork to avoid damage.

NOTES:

- Removal steps in this procedure may contain installation details.
- Left illustration shown, right is similar.


1. \_\_\_\_\_  
Raise and support the vehicle on a suitable 2 post lift.  
Refer to: [Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. \_\_\_\_\_


NOTE:

\_\_\_\_\_


If equipped.

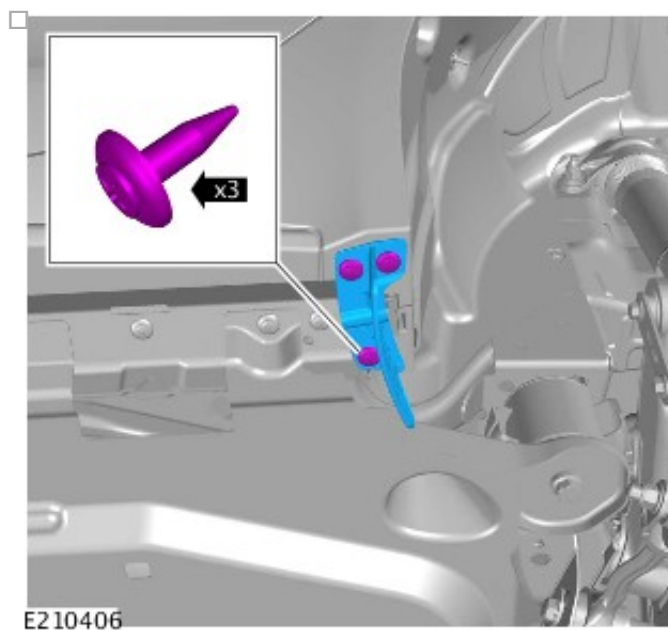

3.

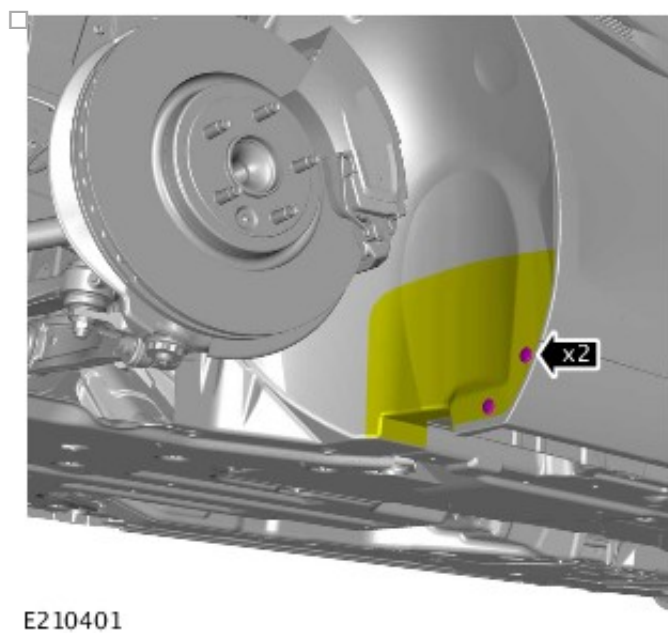


4.

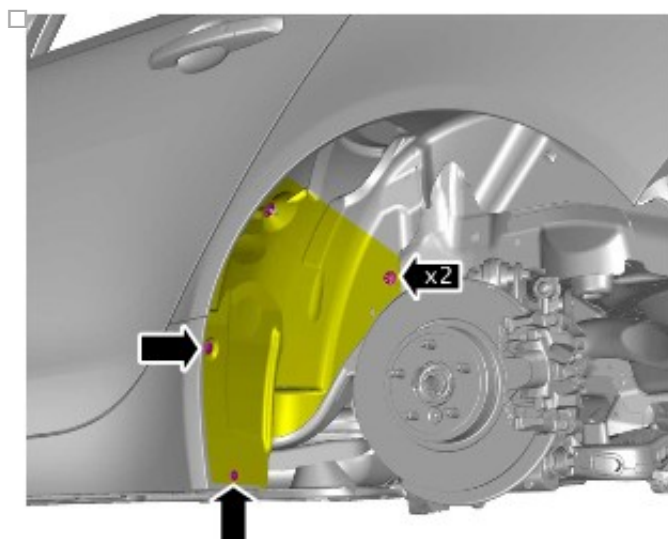


E210404

5.

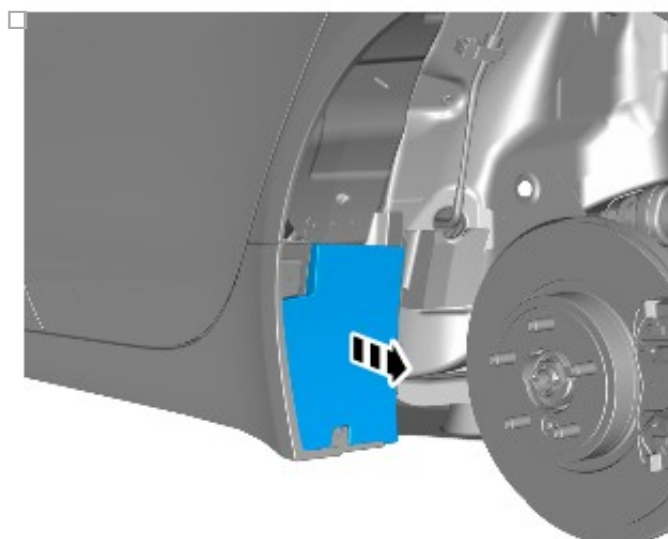


E210400

6.

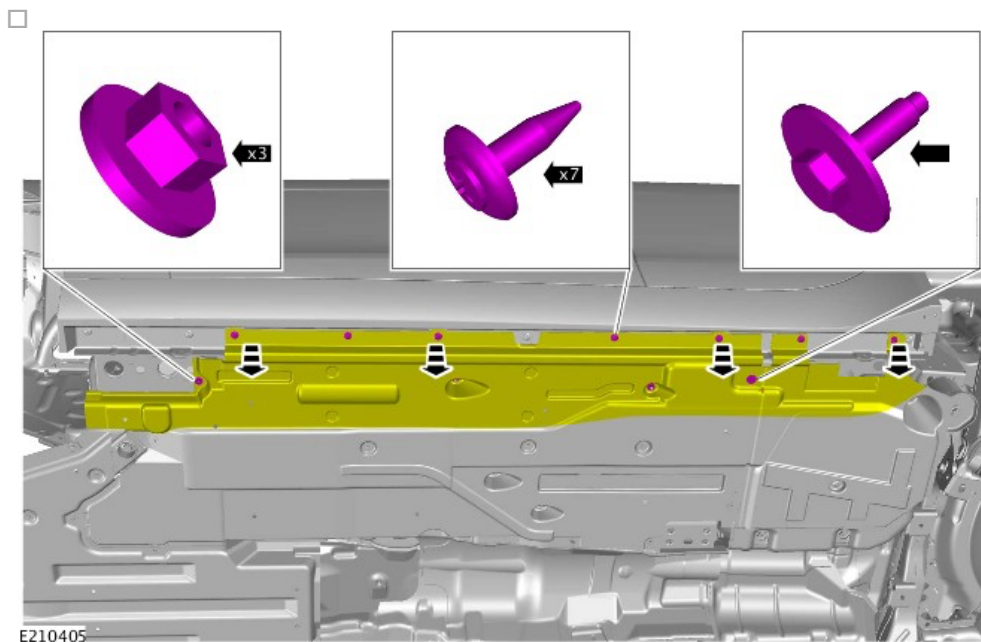


7.

---

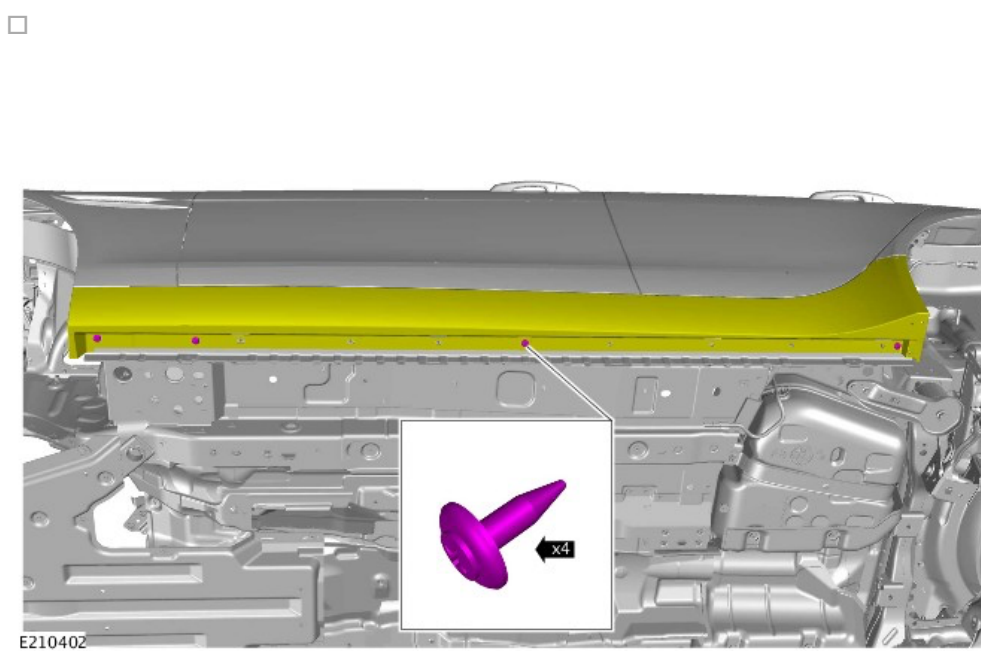

8.

---

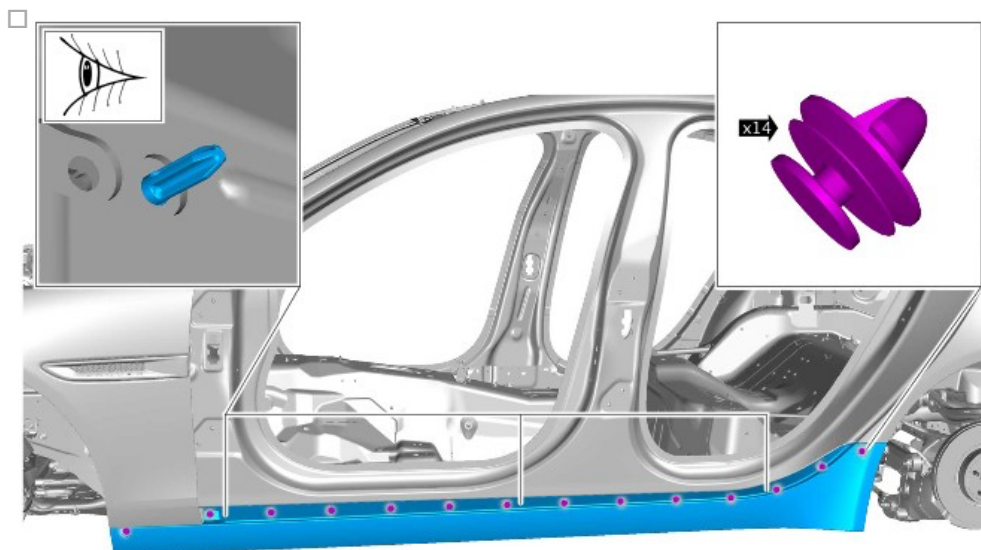

E210403

---

## INSTALLATION

1. 

---

To install, reverse the removal procedure.